

# Technical Bulletin

## Thermal Printer Settings

# TB 1004

The Thermal Printer Assembly has been designed to be compatible with the Signifire II, Solo and Syncro analogue addressable control panels. The Thermal Printer Assembly has two jumper links, which are used to configure the printer. These jumper links must be set to the positions given in table 1, to ensure correct operation of the printer.

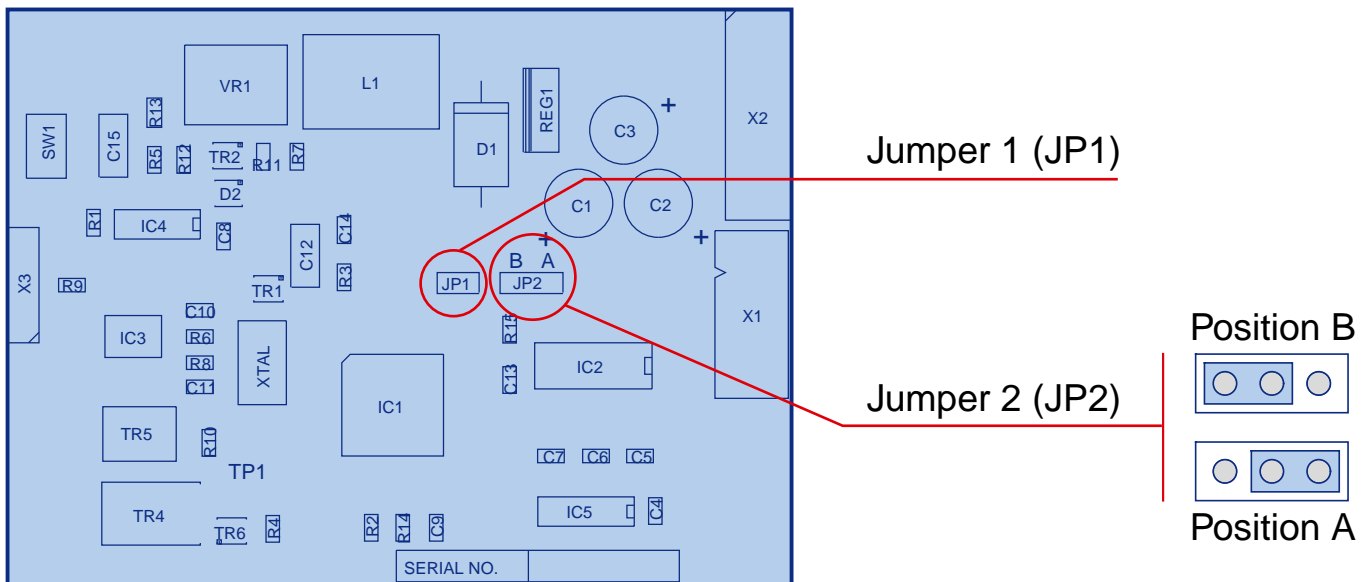


Fig 1. - Thermal Printer Configuration Jumper Locations

Panel Type	JP1 Setting	JP2 Setting
Solo Single Loop (Apollo & Hochiki)	Not Fitted	Position A
Signifire II	Fitted	Position A
Syncro	Not Fitted	Position B

Table 1 - Thermal Printer Jumper Settings